



Sony SLT-A57 LCD Screen Replacement

We will teach you how to replace the LCD screen

Written By: AJ Draper





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [8" Needle Nose Plier](#) (1)



PARTS:

- [Replacement Sony SLT-A LCD screen](#) (1)

Step 1 — Remove the Battery



- Remove the battery from the bottom of the camera.

Step 2 — Pry open the LCD screen



- Delicately pry open the LCD screen from the plastic frame. There are two yellow flex cables coming from the bottom edge, so it is best to pull the top edge loose first to avoid damaging the cables.
- There is a thin adhesive strip that holds the display to the frame. Be careful not to damage this because you will need to transfer it to the new screen.
- Gently unplug the two small flex cables from the bottom edge of the printed circuit board.

Step 3 — Transfer printed circuit board to new display



- Gently remove the adhesive strip that surrounds the old display and transfer it to the new one.
- Unplug the wide yellow flex cable from the printed circuit board.
- Gently peel the circuit board from the old display. Avoid touching the sticky surface.
- Plug the flex cable into new display. Do not stick the circuit board down yet.
- Reattach the two small flex cables that come from the plastic frame. This is easier if you swing the flex cable and circuit board away from the display first.

Step 4 — Put the LCD Screen back in the camera



- Gently press the circuit board to the back of the display. Be careful not to accidentally unplug the flex cables.
- Carefully place the replacement screen back onto the camera with the screen facing outwards.
- Rub carefully but firmly all around the edge of the display to ensure that the adhesive strip firmly holds the display to the frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-04 11:04:02 AM.